Features of your new air conditioner

Cool Summer Offer

On those hot sweltering summer days and long restless nights, there is no better escape from the heat than the cool comforts of home. Your new air conditioner brings an end to exhausting hot summer days and lets you rest. Beat the heat with your own air conditioner this summer.

Cost Efficient System

Your new air conditioner not only provides maximum cooling power in the summer, but also can be an efficient heating method in the winter with the advanced "Heat pump" system. "Heat pump" system is 3 times more efficient compare to the other electrical heating appliance, so you can further reduce its running cost. Now, meet year-round needs with one air conditioner.

Look for Everywhere

The elegant and harmonious design gives priority to the esthetics of your space and complements any of your existing interior décor. With its soft color and rounded-edge shape, the new air conditioner adds class to any room. Enjoy what your air conditioner offers both functionally and esthetically.

good'sleep function

good'sleep function allows you to set a comfortable sleep temperature while saving energy and having sound sleep.

d'light Cool function

d'light Cool function allows you to keep the temperature and humidity at the most comfort level.

SPi (Super plasma ion) function

SPi function generates hydrogen(H) and oxygen(O_2) to attack undesirable air contaminants such as bacteria, pollen, and odor. It makes you breathe better as if you are staying around waterfalls, ocean surf, rivers and mountains.

Contents

USING PARTS

Safety precautions 3
Checking before use 6
Checking the name of the parts 7
Checking the remote controller 8
Basic function 10
Adjusting the air flow direction 12
Using the Turbo function 12
good'sleep mode 13
Setting the Current time 14
Setting the On/Off timer 14
Using the Smart Saver function 16
Using the **SPi** function 16
Using the Auto Clean function 17
Using the d'light Cool function 17
Using the Quiet function 18
Cleaning the air conditioner 19
Maintaining the air conditioner 21
Troubleshooting 22

INSTALLATION PARTS

Safety precautions 24
Choosing the installation location 25
Accessories 28
Fixing the installation plate 29
Connecting the assembly cable 30
Installing and connecting the assembly pipe of the indoor unit 32
Purging the indoor unit 33
Cutting or extending the pipe 33
Installing and connecting the drain hose of the indoor unit 34
Changing direction of the drain hose 35
Installing and connecting the drain hose of the outdoor unit 36
Purging the connected pipes 36
Performing the gas leak tests 39
Fixing the indoor unit in place 40
Fixing the outdoor unit in place 40
Final check and trial operation 41
Pump down procedure (when removing the product) 41
How to connect your extended power cables 42
Sub PCB installation(optional) 43

This product has been determined to be in compliance with the Low Voltage Directive (2006/95/EC), and the Electromagnetic Compatibility Directive (2004/108/EEC) of the European Union.

Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.
Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.
Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 2 2011-1-17 17:06:16

Safety precautions

Before using your new air conditioner, please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance.

Because the following operating instructions cover various models, the characteristics of your air conditioner may differ slightly from those described in this manual. If you have any questions, call your nearest contact center or find help and information online at www.samsung.com.

Important safety symbols and precautions:

WARNING	Hazards or unsafe practices that may result in **severe personal injury or death.**
CAUTION	Hazards or unsafe practices that may result in **minor personal injury or property damage.**

	Follow directions.		Unplug the power plug from the wall socket.
	Do NOT attempt.		Do NOT disassemble.
	Make sure the machine is grounded to prevent electric shock.		

FOR INSTALLATION — WARNING

Plug the power cord into a wall socket with the power specifications of the product or higher and use the socket for this appliance only. In addition, do not use an extension cord.
- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Do not use an electric transformer. It may result in electric shock or fire.
- If the voltage/frequency/rated current condition is different, it may cause fire.

The installation of this appliance must be performed by a qualified technician or service company.
- Failing to do so may result in electric shock, fire, explosion, problems with the product, or injury.

Install a switch and circuit breaker dedicated to the air conditioner.
- Failing to do so may result in electric shock or fire.

Fix the outdoor unit firmly so that the electric part of the outdoor unit is not exposed.
- Failing to do so may result in electric shock or fire.

Do not install this appliance near a heater, inflammable material. Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops). Do not install this appliance in a location where gas may leak.
- This may result in electric shock or fire.

Never install the outdoor unit in a location such as on a high external wall where it could fall.
- If the outdoor unit falls, it may result in injury, death or property damage.

If using a multi system, RJ*outdoor unit can only be connected to European products among AQV09Y*/AQV12Y*/AQV18Y* series.**

This appliance must be properly grounded. Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.
- Failure to do so may result in electric shock, fire, an explosion, or other problems with the product.
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.

FOR INSTALLATION — CAUTION

This appliance should be positioned in such a way that it is accessible to the power plug.
- Failing to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.
- Failing to do so may result in abnormal vibrations, noise, or problems with the product.

Install the draining hose properly so that water is drained correctly.
- Failing to do so may result in water overflowing and property damage.

When installing the outdoor unit, make sure to connect the draining hose so that draining is performed correctly.
- The water generated during the heating operation by the outdoor unit may overflow and result in property damage. In particular, in winter, if a block of ice falls, it may result in injury, death or property damage.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 3 2011-1-17 17:06:17

Safety precautions

FOR POWER SUPPLY | ⚠ WARNING

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.
- Unplug the power plug and clean it with a dry cloth.
- Failing to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.
- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

When the appliance or power plug or power cord is damaged, contact your nearest service center.

Plug the power plug into the wall socket firmly. Do not use a damaged power plug, damaged power cord or loose wall socket.
- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.
- Unplug the power plug by holding the plug.
- Failing to do so may result in electric shock or fire.

Do not pull or excessively bend the power cord. Do not twist or tie the power cord. Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.
- This may result in electric shock or fire.

FOR POWER SUPPLY | ⚠ CAUTION

When not using the air conditioner for a long period of time or during a thunder/lightning storm, cut the power at the circuit breaker.
- Failing to do so may result in electric shock or fire.

FOR USING | ⚠ WARNING

If the appliance is flooded, please contact your nearest service center.
- Failing to do so may result in electric shock or fire.

If the appliance generates a strange noise, a burning smell or smoke, unplug the power plug immediately and contact your nearest service center.
- Failing to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.
- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

To reinstall the air conditioner, please contact your nearest service center.
- Failing to do so may result in problems with the product, water leakage, electric shock, or fire.
- A delivery service for the product is not provided. If you reinstall the product in another location, additional construction expenses and an installation fee will be charged.
- Especially, when you wish to install the product in an unusual location such as in an industrial area or near the seaside where it is exposed to the salt in the air, please contact your nearest service center.

Do not touch the power plug or the circuit breaker with wet hands.
- This may result in electric shock.

Do not unplug the power plug or turn the air conditioner off with the circuit breaker while it is operating.
- Plugging the power plug into the wall outlet or turning the air conditioner on from the circuit breaker may cause a spark and result in electric shock or fire.

After unpacking the air conditioner, keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.
- If a child places a bag over its head, it may result in suffocation.

Do not insert your fingers or foreign substances into the outlet when the air conditioner is operating.
- Take special care that children do not injure themselves by inserting their fingers into the product.

Do not touch the air flow blade with your hands or fingers during the heating operation.
- This may result in electric shock or burns.

Do not insert your fingers or foreign substances into the air inlet/outlet of the air conditioner.
- Take special care that children do not injure themselves by inserting their fingers into the product.

Do not strike or pull the air conditioner with excessive force.
- This may result in fire, injury, or problems with the product.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 4 2011-1-17 17:06:17

FOR USING | ⚠ WARNING

Do not place an object near the outdoor unit that allows children to climb onto the machine.
- This may result in children seriously injuring themselves.

Do not use this air conditioner for long periods of time in badly ventilated locations or near infirm people.
- Since this may be dangerous due to a lack of oxygen, Open a window at least once an hour.

If any foreign substance such as water has entered the appliance, cut the power by unplugging the power plug and turning the circuit breaker off and then contact your nearest service center.
- Failing to do so may result in electric shock or fire.

Do not attempt to repair, disassemble, or modify the appliance yourself.
- Do not use any fuse (such as cooper, steel wire, etc.)other than the standard fuse.
- Failing to do so may result in electric shock, fire, problems with the product, or injury.

FOR USING | ⚠ CAUTION

Do not place objects or devices under the indoor unit.
- Water dripping from the indoor unit may result in fire or property damage.

Check that the installation frame of the outdoor unit is not broken at least once a year.
- Failing to do so may result in injury, death or property damage.

Max current is measured according to IEC standard for safety and current is measured according to ISO standard for energy efficiency.

Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.
- This may result in electric shock, fire, problems with the product, or injury.

Do not operate the appliance with wet hands.
- This may result in electric shock.

Do not spray volatile material such as insecticide onto the surface of the appliance.
- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not drink the water from the air conditioner.
- The water may be harmful to humans.

Do not apply a strong impact to the remote controller and do not disassemble the remote controller.

Do not touch the pipes connected with the product.
- This may result in burns or injury.

Do not use this air conditioner to preserve precision equipment, food, animals, plants or cosmetics, or for any other unusual purposes.
- This may result in property damage.

Avoid directly exposing humans, animals or plants from the air flow from the air conditioner for long periods of time.
- This may result in harm to humans, animals or plants.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

FOR CLEANING | ⚠ WARNING

Do not clean the appliance by spraying water directly onto it. Do not use benzene, thinner or alcohol to clean the appliance.
- This may result in discoloration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the air conditioner from the wall socket and wait until the fan stops.
- Failing to do so may result in electric shock or fire.

FOR CLEANING | ⚠ CAUTION

Take care when cleaning the surface of the heat exchanger of the outdoor unit since it has sharp edges.
- To avoid cutting your fingers, wear thick cotton gloves when cleaning it.

Do not clean the inside of the air conditioner by yourself.
- For cleaning inside the appliance, contact your nearest service center.
- When cleaning the internal filter, refer to the descriptions in the 'Cleaning the air conditioner' section.
- Failure to do may result in damage, electric shock or fire.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 5 2011-1-17 17:06:18

Checking before use

Operation ranges

The table below indicates the temperature and humidity ranges the air conditioner can be operated within. Refer to the table for efficient use.

Mode	Indoor temperature	Outdoor temperature	Indoor humidity
Cooling	16˚C~32˚C	-10˚C~46˚C	Relative humidity 80% or less
Heating	27˚C or less	-15˚C~24˚C	-
Dry	18˚C~32˚C	-10˚C~46˚C	-

▶ If the air conditioner operates in cooling mode for long period of time in high humidity area, dew may be formed.

▶ If the outdoor temperature goes down to -5°C, heating capacity may decrease as much as 60%~70% of specified capacity according to the using conditions.

Model : RJ∗∗∗

Mode	Indoor temperature	Outdoor temperature	Indoor humidity	If out of conditions
Cooling	16˚C~32˚C	-5˚C~46˚C	80% or less	Condensation may occur on the indoor unit with risk to have either water blow off or drop on the floor.
Heating	27˚C or less	-15˚C~24˚C	-	Internal protection triggers and the air conditioner will stop.
Dry	18˚C~32˚C	-5˚C~46˚C	-	Condensation may occur on the indoor unit with risk to have either water blow off or drop on the floor.

▶ The standardizedtemperature for heating is 7˚C. If the outdoor temperature drops to 0˚C or below, the heating capacity can be reduced depending on the temperature condition.

▶ If the cooling operation is used at over 32˚C(indoor temperature), it does not cool at its full capacity.

Maintaining your air conditioner

Internal protections via the unit control system

▶ This internal protection operates if an internal fault occurs in the air conditioner.

Type	Description
Against cold air	The internal fan will be off to against cold air when the heat pump is heating.
De-ice cycle	The internal fan will be off to against cold air when the heat pump is heating.
Anti-protection of internal battery	The compressor will be off to protect internal battery when the air conditioner operates in Cool mode.
Protect compressor	The air conditioner does not start operating immediately to protect the compressor of the outdoor unit after it has been started.

NOTE

- If the heat pump is operating in Heat mode, De-ice cycle is actuated to remove frost from an outdoor unit that may have deposited at low temperatures.
  The internal fan is switched off automatically and restarted only after the de-ice cycle is completed.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 6 2011-1-17 17:06:18

Checking the name of the parts

Your air conditioner may slightly look different from illustration shown above depending on your model.

Main parts

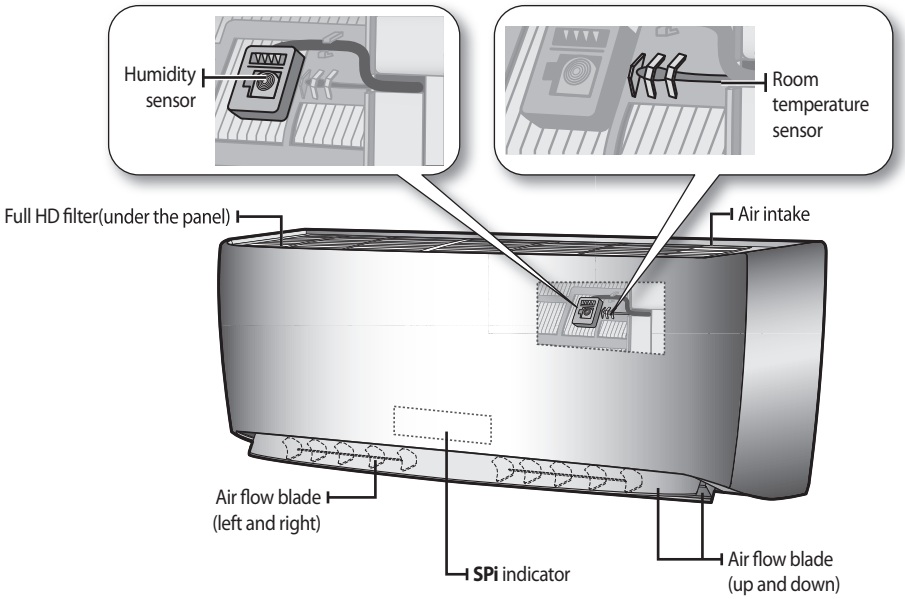

Display

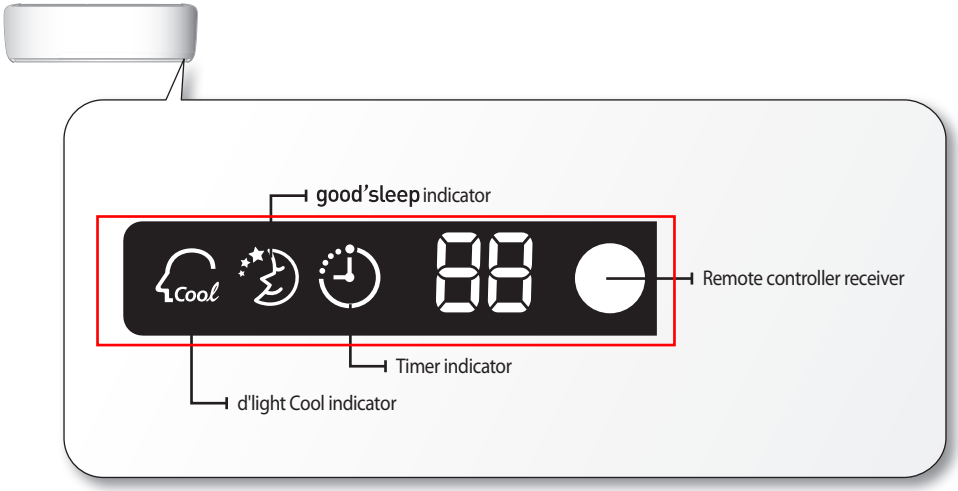

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 7 2011-1-17 17:09:29

Checking the remote controller

- Point the remote controller towards the remote controller receiver of the indoor unit.
- When you properly press the button on the remote controller, you will hear beep sound from the indoor unit and a transmit indicator( ) appears on the remote controller display.

Remote controller buttons

✳ Before using the functions of the remote controller, you should set the current time. (Refer to p.14)

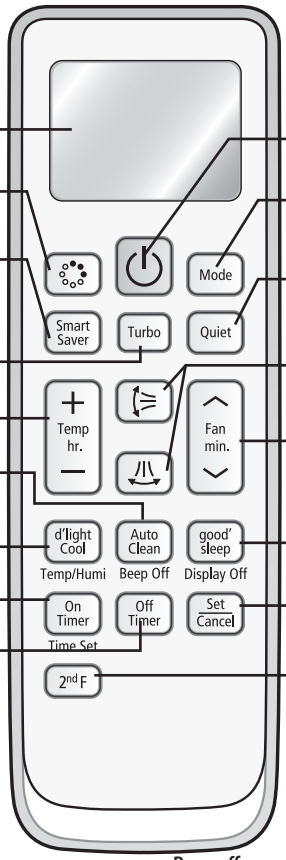

Remote controller display

SPi
Set the **SPi** function on/off.

Smart Saver
Less energy usage makes your space cool between the temperature range of 24°C~30°C.

Turbo
Operate in auto fan speed to cool quickly.

Temp + -
Increase/Decrease the temperature by 1°C.

Auto Clean
Auto clean function – Dry inside of the indoor unit to get rid of odor.

d'light Cool
Set the d'light Cool function on/off.

On Timer
Set the On Timer on.

Off Timer
Set the Off Timer on.

Power
Turn on/off the air conditioner.

Mode
Set one of the 5 operating modes (see pages 10~11 for instructions).

Quiet
Reduce noise generated from an indoor unit during operation.

Air swing
Activate/Deactivate air flow blade movement automatically up and down.

Fan
Adjust how much air flows through the air conditioner with the 4 different fan speeds such as Auto/Low/Medium/High.

good' sleep
Set the good' sleep mode on.

Set/Cancel
Cancel the timer/good' sleep mode.

2nd F
Switch the function of the button on the remote controller.

Temp/Humi

- Display the room humidity level and temperature value for 5 seconds on the indoor unit display:
  - Hi : High (If the relative humidity is 70% or higher)
  - Sd : Standard (If the relative humidity is lower than 70%)
  - For room temperature will be displayed the value.

Beep off
To silence the beep sound when pressing the button.

Display off
To turn off the display light

Time set
Set the current time

NOTE

- When you press [2nd F] button, the 2nd F indicator will be displayed on the remote controller and you can change the functions on the remote controller as listed below.
  d'light Cool ▶ Temp/Humi, Auto Clean ▶ Beep Off, good' sleep ▶ Display Off, On Timer ▶ Time Set function.
  If you select the function under the button while the function of the button is switched by 2nd F button, the 2nd F function is canceled.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 8 2011-1-17 17:06:27

Remote controller display

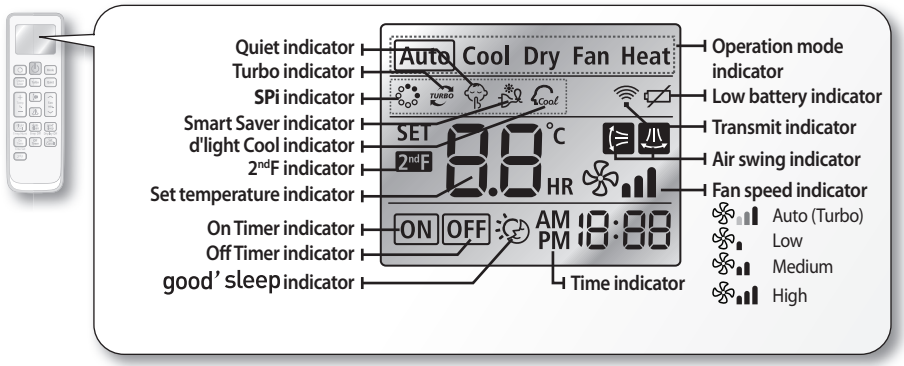

CAUTION

- Make sure that the water does not get to the remote controller.

Battery changing time

When the battery is exhausted, (⊘) will be displayed in the remote controller display. When the icon appears, change the batteries. The remote controller requires two 1.5V AAA type batteries.

Storing the remote controller

When you do not use the remote controller for long time, remove the batteries from the remote controller and store it.

Inserting the batteries



1. **Push the lever as arrow indicates on the rear side of the remote controller and pull up.**
2. **Insert two AAA batteries.**
   Check and match the "+" and "-" signs accordingly. Make sure you have inserted the batteries in correct position.
3. **Close the cover by place it back to its original position.**
   You should hear click sound when the cover is locked properly.

NOTE

- The signal may not be received well of electronic lighting style fluorescent lamps such as inverter fluorescent lamps are in the same space.
- If other electrical products operate by the remote controller, call your nearest contact center.

Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems.)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66.

If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 9 2011-1-17 17:06:30

Basic function

Basic operation is an operation mode that can be selected by pressing the **Mode** button.

Auto

In Auto mode, the air conditioner will automatically set the temperature and fan speed depending on the room temperature detected by the room temperature.

- If using a multi system, in Auto operation, the system selects a temperature setting and an appropriate operation mode (COOL or HEAT) based on the room temperature at the start of the operation.

Cool

In Cool mode, the air conditioner will cool your room. You can adjust the temperature and the fan speed to feel cooler in hot season.

- If current outside temperatures are much higher than the selected indoor temperature, it may take time to bring the inner temperature to the desired coolness.
- Quiet mode( ) makes the noise quieter during the operation of the indoor unit in the Cool mode.

Dry

The air conditioner in Dry mode acts like a dehumidifier by removing moisture from the indoor air.
Dry mode makes the air feel refreshing in a humid climate.

Fan

Fan mode can be selected to ventilate your room. Fan mode will be helpful to refresh the stale air in your room.

Heat

The air conditioner heats as well as cools. Warm your room with this versatile appliance in the cold of winter.

- Fan may not operate for about 3~5 minutes at the beginning to prevent any cold blasts while the air conditioner is warming up.
- Quiet mode( ) makes the noise quieter during the operation of the indoor unit in the Heat mode.
- Since the air conditioner heats the room by taking heat energy from outdoor air, the heating capacity may decrease when outdoor temperature is extremely low.
  Use an additional heating appliance in combination with the air conditioner if you feel the air conditioner heats insufficiently.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 10 2011-1-17 17:06:31

Press the button to turn on the air conditioner.

Press the Mode button to set the operating mode.

- Each time you press the **Mode** button, the mode will change in order of Auto, Cool, Dry, Fan and Heat.

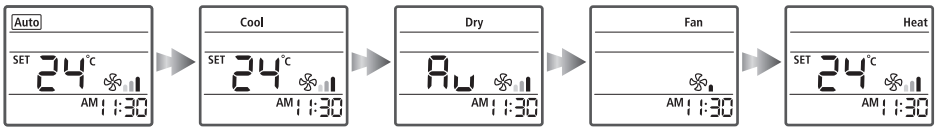

Press the Fan min. button to set the desired fan speed.

Auto	(Auto)
Cool	(Auto), (Low), (Med), (High)
Dry	(Auto)
Fan	(Low), (Med), (High)
Heat	(Auto), (Low), (Med), (High)

Press the Temp hr. button to adjust the temperature.

Auto	You can adjust the desired temperature by 1°C within the range of 16°C~30°C.
Cool	You can adjust the desired temperature by 1°C within the range of 16°C~30°C.
Dry	Temperature adjustment is not possible.
Fan	Temperature adjustment is not possible.
Heat	You can adjust the desired temperature by 1°C within the range of 16°C~30°C.

NOTE

- Press the **Temp/Humi** button on the remote controller to check the temperature and humidity level in a room.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 11 2011-1-17 17:06:33

Adjusting the air flow direction

Air flow can be directed to your desired position.

Vertical air flow

Air flow blades move up and down.

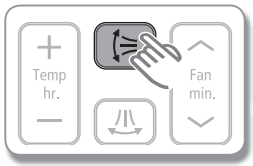

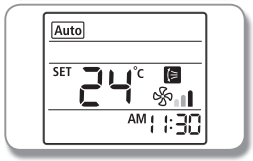

Press the Air swing button on the remote controller.

- Air swing indicator will be on the remote controller display and air flow blades move up and down continuously to circulate the air.
- Press the **Air swing** button on the remote controller again, to keep the air flow direction in a constant position.

Horizontal air flow

Air flow blades move left and right.

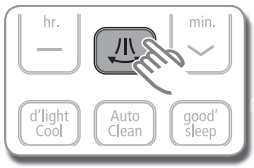

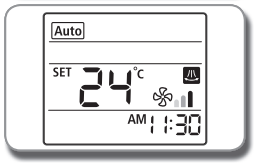

Press the Air swing button on the remote controller.

- Air swing indicator will be on the remote controller display and air flow blades move left and right continuously to circulate the air.
- Press the **Air swing** button on the remote controller again to keep the air flow direction in a constant position.

NOTE

- Adjusting the air flow direction is not available in good sleep mode while it is in cool mode. However, you can adjust the air flow direction in good sleep mode while it is in heat mode.

Using the Turbo function

Turbo function will be helpful to cool your room quickly and effectively.

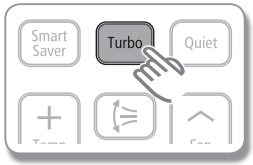

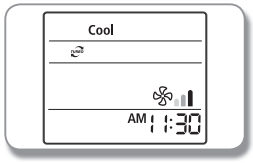

Press the Turbo button on the remote controller during Cool mode.

- Turbo indicator appears on the remote controller display and the air conditioner operates in Turbo function for 30 minutes.

Cancel Press the **Turbo** button once again.

NOTE

- Turbo function is only available in Cool mode.
- If you press the **Mode** button while the Turbo function is on, it will cancel the function.
- Temperature/Fan speed cannot be adjusted while using this function.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 12 2011-1-17 17:06:37

good' sleep mode

Before using good' sleep mode, set the current time.(For setting current time, refer to the page 14.)
For a comfortable sleep, the air conditioner will operate it Fall asleep ▷ Sound sleep ▷ Wake up from good' sleep mode.

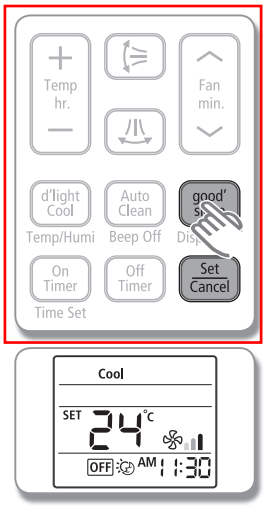

When the air conditioner is on and in cool/heat mode

1. **Press the good' sleep button on the remote controller.**
   - ▶ good' sleep indicator appears and Off timer indicator starts blinking on the remote controller display.
2. **Press the good' sleep button to set the time.**
   - ▶ You can set the time in half hourly unit from 30 minutes ~ 3 hours and hour unit from 3 hours ~ 12 hours.
   - ▶ Operating hour can be set from minimum 30 minutes to maximum 12 hours.
   - ▶ Default operation hour is set to 8 hours.
3. **Press the Set/Cancel button to active it.**
   - ▶ Off timer indicator stops blinking and reserved time will be displayed for 3 seconds. Then the air conditioner operates in good'sleep(Cool) mode.
   - ▶ If you don't press **Set/Cancel** button within 10 seconds after pressing the good' sleep button, the air conditioner will return to previous status. Check Off timer indicator and indicator on the indoor unit.

Cancel Press the **Set/Cancel** button once again.

Temp hr.	You can set the desired temperature by 1˚C in the range of 16˚C~30˚C.
Fan min.	Fan speed will be adjusted automatically according to the good' sleep mode.
	When the good' sleep mode is on. In Cool mode : Air flow direction will be adjusted automatically. In Heat mode : Adjusting air flow direction is available.

Temperature and fan speed changes in good' sleep mode

- Fall asleep: Eases you into sleep by dropping the temperature.
- Sound sleep: Relaxes your body and raises your temperature slightly.
- Wake up from good' sleep mode: Allows you to wake up from comfortable intermittent air and it makes you feel refreshed.

NOTE

- Set Off timer in good' sleep mode over 5 hours. You fell disturbed sleep if the good' sleep is set too short or long because the default is set to 8-hour-operation.
- If the good' sleep mode is set less than 4 hours, the operation will stop at the same time.
  If the good' sleep mode is set over 5 hours, it will run as Wake up stage from the last one hour before it stops.
- Recommended set temperature is between 25˚C~27˚C for cooling and 21˚C~23˚C for heating.

ENGLISH

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 13 2011-1-17 17:06:40

Setting the Current time

Before using the functions of the air-conditioner, set the current time.

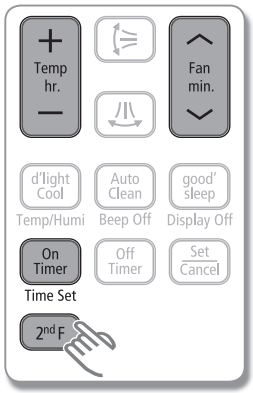

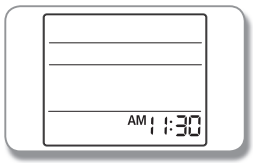

1. **Press 2ndF button**
   ▶ 2ndF indicator appears on the remote controller display.

2. **Press Time Set button to set the current time**
   ▶ AM or PM indicator will blink and you can set the time by pressing **Temp hr. +** or **–** button for hour and **Fan min.** ^ v button for minute.

3. **Press Time Set button again to active it.**

Setting the On/Off timer

CAUTION
- Check the current time on the remote controller before using this function.
- The default time is 12 AM on the remote controller. The current time is reset to default time after changing the batteries .

You can set the air conditioner to turn on/off automatically at desired time.

Setting On timer while the air conditioner is off / Off timer while the air conditioner is on

Setting On timer

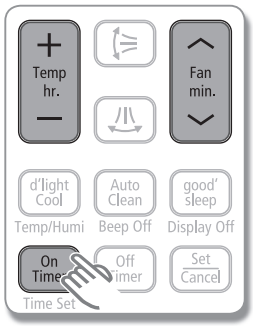

1. **Press the On Timer/Off Timer button.**
   ▶ On/Off timer indicator will blink on the remote controller display.

2. **Press the Temp hr. + or – button and Fan min. ^ v button to set the time.**
   ▶ You can set the time in hourly units from 1 hour ~ 12hours according to AM, PM and in minute units from 1minute ~ 59minutes.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 14 2011-1-17 17:06:41

Setting Off timer

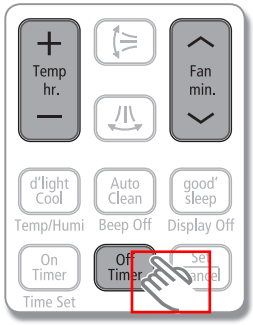

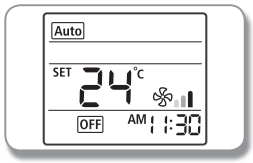

3. **Press the Set/Cancel button to active it.**
   - ▶ On timer indicator stops blinking and reserved time will be displayed for 3 seconds.
   - ▶ If you don't press **Set/Cancel** button within 10 seconds after selecting the time the air conditioner will return to previous status. Check On timer or Off timer indicator and ⏲ indicator on the indoor unit.

Cancel Press the **Set/Cancel** button once again.

Additional options available in On timer mode	
Mode	Displays the last mode set before turning the unit off.
Fan min.	Adjusting fan speed is not available.
Temp hr.	You can adjust the temperature in Auto/Cool/Heat mode.

NOTE
- Only the latest setting timer will be applied between the On Timer/Off Timer and **good' sleep** Off timer functions.

Setting on timer and off timer simultaneously

Follow the same process for setting on timer and off timer.

NOTE
- On timer and Off timer setting time should be different from each other.
- Press the **Set/Cancel** button on the remote controller while timer combination is on. Both of the On and Off timer will be canceled and the indicator will disappear.

ENGLISH

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 15 2011-1-17 17:06:44

Using the Smart Saver function

This function will set the temperature range limit to help you save energy while the air conditioner is operating in Cool mode.

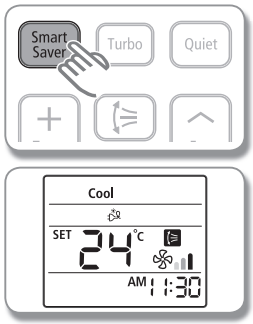

Press the Smart Saver button on the remote controller while the air conditioner is operating in Cool mode.

- Smart Saver indicator and air swing indicator appears automatically on the remote controller display.
  The air flow blades move up and down.
- If the current set temperature is lower than 24°C, it will automatically raise to 24°C.

Cancel Press the **Smart Saver** button once again.

NOTE

- Smart Saver function is only available in Cool mode.
- When Smart Saver function is activated, temperature range will be limited to 24°C~30°C.
- If the desired temperature is lower than 24°C, turn off the Smart Saver function by pressing the **Smart Saver** button again.
- Temperature/Fan speed can also be adjusted (see page 11 for instructions).
- If you press the **Mode** button while the Smart Saver function is on, it will cancel the function.

Using the SPi function

SPi (Super Plasma ion) generates hydrogen(H) and oxygen(O_2) to remove a polluted substance and decomposition of such harmful particles. It makes you breathe better as if you are staying around waterfalls, ocean surf, rivers and mountains.

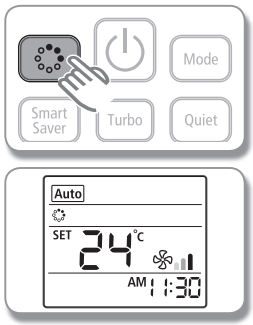

Press the button on the remote controller.

- indicator will appears on the remote controller display and the air conditioner generates MPI.

Cancel Press the button once again.

NOTE

- The function can be selected whether the air conditioner is on/off.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 16 2011-1-17 17:06:46

Using the Auto Clean function

Auto clean function will prevent mold from growing by eliminating the moisture inside of the indoor unit. Your indoor unit evaporates the moisture inside of the unit. Activate this function to provide you with more clean and healthier air.

Press the Auto Clean button.

When the air conditioner is turned off,

▶ The Auto clean indicator on the indoor unit display appears and the Auto cleaning function runs.

When the air conditioner is turned on,

▶ After stopping the air conditioner operation , the Auto clean indicator on the indoor unit display appears and the Auto cleaning function runs.

※ Auto Clean time can vary, depending on the previously used mode.

Auto(cool), Cool, Dry mode : approximately 30 minutes.
Auto(heat), Heat, Fan mode : approximately 15 minutes.

Cancel Press the **Auto clean** button once again.

NOTE
- The Auto clean indicator appears only on the indoor unit display as C 1(Clean).
- When the air conditioner is turned on, the Auto clean function runs after stopping the air conditioner operation.

Using the d'light Cool function

The sensor in the indoor unit, which measures temperature and humidity in a room, keeps the room temperature in the most comfortable level by controlling the temperature and the fan speed automatically.

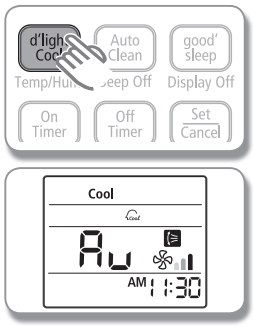

Press the d'light Cool button on the remote controller while the air conditioner is operating in Cool mode.

▶ d'light Cool indicator and air swing indicator appears automatically on the remote controller display.

▶ The air conditioner will set the fan speed to auto and adjust the temperature automatically according to the room temperature and humidity.

Cancel Press the **d'light Cool** button once again.

NOTE
- d'light Cool function is only available in Cool mode.
- When d'light Cool function is activated, temperature sets automatically and Au will appear on the remote controller display.
- If you press the **Mode** button while the d'light Cool function is on, it will cancel the function.
- If using a multi system, this function will work only when the d'light Cool function is set on all operated indoor units.

ENGLISH

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 17 2011-1-17 17:06:48

Using the Quiet function

You can reduce the noise generated from an indoor unit.

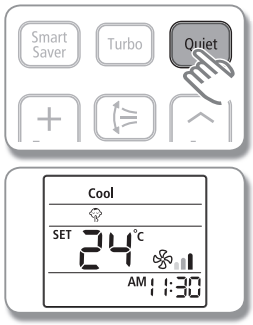

Press the Quiet button on the remote controller while the air conditioner is operating in Cool/Heat mode.

- ▶ Quiet indicator appears on the remote controller display.
- ▶ The indoor unit will operate more quietly.

Cancel Press the **Quiet** button once again.

NOTE

- If using a multi system, this function will work only when the Quiet function is set on all operated indoor units.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 18 2011-1-17 17:06:49

Cleaning the air conditioner

CAUTION
- **Make sure the power is turned off and unplugged from the wall socket when cleaning the air conditioner.**

Cleaning the indoor unit

- Wipe the surface of the unit with a slightly damp micro fiber cloth when needed.

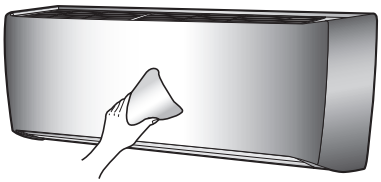

NOTE
- Contact the service center when you clean the indoor unit heat exchanger because it needs to be disassembled.
- Since the panel of the indoor unit is easily scratched, you should use a micro fiber cloth to clean the panel. When you use the micro fiber cloth, slightly dampen the cloth and remove any debris on the cloth to avoid scratches.

CAUTION
- Do not clean the display using alkaline detergent.
- Do not use sulfuric acid, hydrochloric acid, organic solvents (such as thinner, kerosene and acetone etc.) to clean the surface of the product or put any stickers on it. They may damage the surface of the air conditioner.

Cleaning the outdoor unit heat exchanger

- When dust accumulates on the heat exchanger, it may decrease cooling performance. Therefore, clean it regularly.
- Spray water to clean the dust.

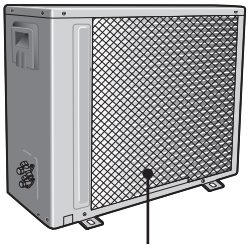

Heat exchanger

(Illustration may differ slightly depending on the models)

NOTE
- If it is difficult to clean the outdoor unit heat exchanger on your own, contact service center.

CAUTION
- Be careful with the sharp edges on the outdoor unit heat exchanger.

Opening the panel

Tightly grip each side of the front panel and lift the panel up to open. Then release the panel which should be automatically positioned to hold the panel open.

- To close the panel, slightly lift up the front panel while pushing gently and lower the panel.

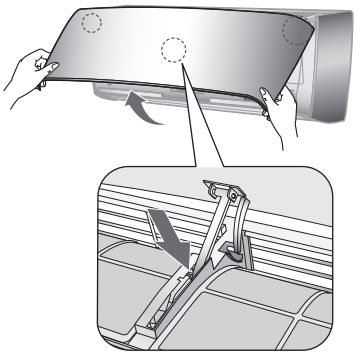

ENGLISH

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 19 2011-1-17 17:06:52

Cleaning the air conditioner

Removing the Full HD filter

Grab the handle and lift it up. Then, pull the Full HD filter towards you and slide it down.

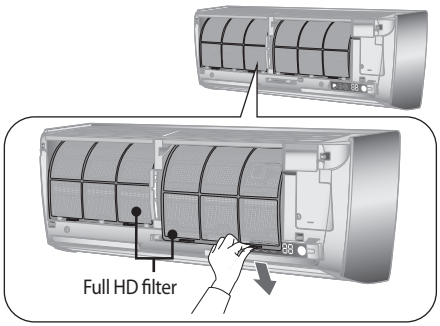

Cleaning the Full HD filter

Washable foam based Full HD filter captures large particles from the air. The filter is cleaned with a vacuum or by hand washing.

Open the panel and put the Full HD filter out.

Clean the Full HD filter with a vacuum cleaner or soft brush. If dust is too heavy, rinse it with running water.

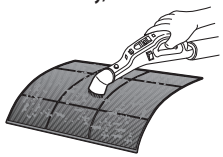

Dry the Full HD filter in a ventilated area.

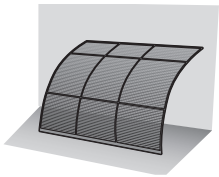

Insert the Full HD filter back in its original position and close the front panel.

NOTE

- Clean the Full HD filter every 2 weeks. Cleaning term may differ depending on the usage and environmental conditions. In dusty area, clean it once a week.
- If the Full HD filter dries in a confined (or humid) area, odors may generate. If it occurs, re-clean and dry it in a well-ventilated area.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 20 2011-1-17 17:06:55

Maintaining the air conditioner

If the air conditioner will not be used for an extended period of time, dry the air conditioner to maintain it in best condition.

1. **Dry the air conditioner thoroughly by operating in Fan mode for 3 to 4 hours and disconnect the power plug. There may be internal damage if moisture is left in components.**
2. **Before using the air conditioner again, dry the inner components of the air conditioner again by running in Fan mode for 3 to 4 hours. This helps remove odors which may have generated from dampness.**

Periodical checks

Refer to the following chart to maintain the air conditioner properly.

Type	Description	Every 2 weeks	Every 3 months	Every 4 months	Once a year
Indoor unit	Clean the Full HD filter (1)	●			
	Clean the condensate drain pan (2)				●
	Thoroughly clean the heat exchanger (2)				●
	Clean the condensate drain pipe (2)			●	
	Replace the remote controller batteries (1)				●
Outdoor unit	Clean the heat exchanger on the outside of the unit (2)			●	
	Clean the heat exchanger on the inside of the unit (2)				●
	Clean the electric components with jets of air (2)				●
	Verify that all the electric components are firmly tightened (2)				●
	Clean the fan (2)				●
	Verify that all the fan assembly is firmly tightened (2)				●
	Clean the condensate drain pan (2)				●

● : **This check mark requires checking the indoor/outdoor unit periodically. Follow the description to maintain the air conditioner properly.**

NOTE

(1) The described operations should be performed more frequently if the area of installation is very dusty.
(2) These operations must always be performed by qualified personnel. For more detailed information, see the installation part in the manual.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 21 2011-1-17 17:06:55

Troubleshooting

Refer to the following chart if the air conditioner operates abnormally. This may save time and unnecessary expenses.

PROBLEM	SOLUTION
The air conditioner does not work at all.	• Check power status and then operate the air conditioner again. • Plug in or switch on the circuit breaker and then operate the air conditioner again. • Check if you have set the Off Timer. Operate the air conditioner again by pressing the **Power** button.
The temperature adjustment is not working.	• Check if you have selected Dry/Fan/Turbo/d'light Cool mode. In these modes, desired temperature is set to auto and you cannot adjust the temperature.
Cool/Warm air does not come out of the air conditioner.	• Check if the set temperature is higher(during Cool mode)/lower(during Heat mode) than the current temperature. Press the **Temp hr. +** or **–** button on the remote controller to change the set temperature. • Check if the Full HD filter is blocked by dirt. If there is a lot of dust on the Full HD filter, cooling(heating) performance may decrease. Clean them frequently. • Check if the outdoor unit is covered or installed near the obstacle. Take the cover off and take the obstacle away. • If you want to operate the air conditioner in the sunlight, cover the outdoor unit using curtains or etc. • Check if the air conditioner is operating in De-ice mode. When the ice formed in winter or the outdoor temperature is too low, the air conditioner operates in De-ice mode automatically. In De-ice mode, indoor fan stops and cool air does not come out. • If the doors or windows are open, it may cause bad cooling (heating) performance. Close the doors and windows. • Check if the air conditioner has just been turned on after stopping cooling or heating operation. In this case, just a fan will run to protect the outdoor unit compressor. • Check if the pipe length is too long. When the pipe length exceeds maximum allowable pipe length, cooling (heating) performance may decrease.
Air flow adjustment is not working.	• Check if you have selected good' sleep mode. In these modes, and you cannot adjust the air flow direction. (If the good'sleep mode is operating in Heat mode, you can adjust the air flow direction)
Fan speed adjustment is not working.	• Check if you have selected Auto/Dry/Turbo/good' sleep/d'light Cool mode. In these mode, fan speed is set to Auto and you cannot adjust the fan speed.
Remote controller is not working.	• Check if your batteries are depleted. • Make sure nothing is blocking your remote controller sensor. • Check that there are strong lighting apparatus near the air conditioner. Strong light which comes from fluorescent bulbs or neon signs may interrupt the electric waves.
Timer function does not set.	• Check if you press the **Set/Cancel** button on the remote controller after you have set the time.
The indicator is blinking continuously.	• Press the **Power** ⏻ button or disconnect the power plug/switch off the auxiliary power switch. If the indicator is still blinking, contact the service center.
Odors permeate in the room during operation.	• Check if the appliance is running in a smoky area. Ventilate the room or operate the air conditioner in Fan mode for 1~2 hours. (We do not use smelly components in the air conditioner.) • Clean the Full HD filter if they are dirty. Replace the Deodorizing filter if it is dirty.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 22 2011-1-17 17:06:56

PROBLEM	SOLUTION
Error is indicated.	• If error indicator such as E101, E121, E122, E154, E162, E186, E102, All blink, E221, E237, E251, E416, E458, E461, E462, E464, E465, E467, E468, E469, E471, E472, E554, E556, E142 appears on the indoor unit display, contact nearest contact center.
Noise is generated.	• Depending on the status of the air conditioner usage, noise can be heard when refrigerant flow movement changes. It is normal.
Smoke is generated from the outdoor unit.	• If may not be a fire but it can be a steam generated by the defrost operation from outdoor heat exchanger during Heat mode in winter.
Water is dropping from the outdoor unit piping connection.	• Water may be generated because of the temperature difference. It is normal.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 23 2011-1-17 17:06:57

INSTALLATION PARTS

※ In this manual, you may find model names written in simplified forms as indicated in following table.

Model Names	Included Models	Remark
AQV✳✳K✳	AQV09K✳, AQV12K✳, AQV18K✳	Grouping was done by series.
AQV✳✳Y✳	AQV09Y✳, AQV12Y✳, AQV18Y✳	
✳✳✳09✳✳	AQV09K✳, AQV09Y✳	Grouping was done by capacity.
✳✳✳12✳✳	AQV12K✳, AQV12Y✳	
✳✳✳18✳✳	AQV18K✳, AQV18Y✳	

Safety precautions

Carefully follow the precautions listed below because they are essential to guarantee the safety of the equipment.

- Always disconnect the air conditioner from the power supply before servicing it or accessing its internal components.
- Verify that installation and testing operations are performed by qualified personnel.
- Verify that the air conditioner is not installed in an easily accessible area.

General information

- Carefully read the content of this manual before installing the air conditioner and store the manual in a safe place in order to be able to use it as reference after installation.
- For maximum safety, installers should always carefully read the following warnings.
- Store the operation and installation manual in a safe location and remember to hand it over to the new owner if the air conditioner is sold or transferred.
- This manual explains how to install an indoor unit with a split system with two SAMSUNG units.
  The use of other types of units with different control systems may damage the units and invalidate the warranty.
  The manufacturer shall not be responsible for damages arising from the use of non compliant units.
- The air conditioner is compliant with the requirements of the Low Voltage Directive (72/23/EEC), the EMC Directive (89/336/EEC) and the Directive on pressurized equipment (97/23/EEC).
- The manufacturer shall not be responsible for damage originating from unauthorized changes or the improper connection of electric and requirements set forth in the "Operating limits" table, included in the manual, shall immediately invalidate the warranty.
- The air conditioner should be used only for the applications for which it has been designed: the indoor unit is not suitable to be installed in areas used for laundry.
- Do not use the units if damaged. If problems occur, switch the unit off and disconnect it from the power supply.
- In order to prevent electric shocks, fires or injuries, always stop the unit, disable the protection switch and contact SAMSUNG's technical support if the unit produces smoke, if the power cable is hot or damaged or if the unit is very noisy.
- Always remember to inspect the unit, electric connections, refrigerant tubes and protections regularly. These operations should be performed by qualified personnel only.
- The unit contains moving parts, which should always be kept out of the reach of children.
- Do not attempt to repair, move, alter or reinstall the unit. If performed by unauthorized personnel, these operations may cause electric shocks or fires.
- Do not place containers with liquids or other objects on the unit.
- All the materials used for the manufacture and packaging of the air conditioner are recyclable.
- The packing material and exhaust batteries of the remote controller(optional) must be disposed of in accordance with current laws.
- The air conditioner contains a refrigerant that has to be disposed of as special waste. At the end of its life cycle, the air conditioner must be disposed of in authorized centers or returned to the retailer so that it can be disposed of correctly and safely.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 24 2011-1-17 17:06:57

Installing the unit

IMPORTANT: When installing the unit, always remember to connect first the refrigerant tubes, then the electrical lines.
Always disassemble the electric lines before the refrigerant tubes.

- Upon receipt, inspect the product to verify that it has not been damaged during transport.
  If the product appears damaged, DO NOT INSTALL it and immediately report the damage to the carrier or retailer (if the installer or the authorized technician has collected the material from the retailer.)
- After completing the installation, always carry out a functional test and provide the instructions on how to operate the air conditioner to the user. If using a multi system, carry out a functional test as described in the installation manual supplied with the outdoor unit.
- Do not use the air conditioner in environments with hazardous substances or close to equipment that release free flames to avoid the occurrence of fires, explosions or injuries.
- To prevent injury when accidentally touching the indoor unit fan, install the indoor unit at least 2.5m above the floor.
- The air conditioner should be used only for the applications for which it has been designed : the indoor unit is not suitable to be installed in areas used for laundry.
- Our units must be installed in compliance with the spaces indicated in the installation manual to ensure either accessibility from both sides or ability to perform routine maintenance and repairs. The units'components must be accessible and that can be disassembled in conditions of complete safety either for people or things.
  For this reason, where it is not observed as indicated into the Installation Manual, the cost necessary to reach and repair the unit (in safety, as required by current regulations in force) with slings, trucks, scaffolding or any other means of elevation won't be considered in-warranty and charged to end user.

Power supply line, fuse or circuit breaker

- Always make sure that the power supply is compliant with current safety standards. Always install the air conditioner in compliance with current local safety standards.
- Always verify that a suitable grounding connection is available.
- Verify that the voltage and frequency of the power supply comply with the specifications and that the installed power is sufficient to ensure the operation of any other domestic appliance connected to the same electric lines.
- Always verify that the cut-off and protection switches are suitably dimensioned.
- Verify that the air conditioner is connected to the power supply in accordance with the instructions provided in the wiring diagram included in the manual.
- Always verify that electric connections (cable entry, section of leads, protections…) are compliant with the electric specifications and with the instructions provided in the wiring scheme.
  Always verify that all connections comply with the standards applicable to the installation of air conditioners.

Choosing the installation location

Indoor unit

- Where airflow is not blocked.
- Where cool air can be distributed throughout the room.
- Install the refrigerant piping length and the height difference of both indoor and outdoor units as indicated in the installation diagram.
- Wall that prevents vibration and is strong enough to hold the product weight.
- Out of the direct sunlight .
- 1m or more away from the TV or radio (to prevent the screen from being distorted or noise from being generated).
- As far away as possible from the fluorescent and incandescent lights (so that the remote controller can be operated well).
- A place where the air filter can be replaced easily.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 25 2011-1-17 17:06:57

Choosing the installation location

Outdoor Unit

- Where it is not exposed to strong wind
- Well ventilated and dustless places
- Out of the direct sunlight and rain
- Where neighbors are not annoyed by operation sound or hot air
- Solid wall or support that prevents vibration and is strong enough to hold the product weight
- Where there is no risk of flammable gas leakage
- When installing the unit at a high place be sure to fix the unit legs
- 3m or more away from the TV or radio (to prevent the screen from being distorted or noise from being generated)
- Install the unit horizontally
- Place where drained water does not become any problem.
- Place with no plants (especially climbing plants) and where small animal can not access.

CAUTION

- Avoid the following places to prevent malfunction of the unit
  - Where there is machine oil
  - Where sulfide gas exists
  - Salty environment such as seaside areas
  - Other special atmosphere areas

Observe the clearances and maximum lengths as seen in the picture below when installing the air conditioner.

If using a multi system, install as described in the installation manual supplied with the outdoor unit.

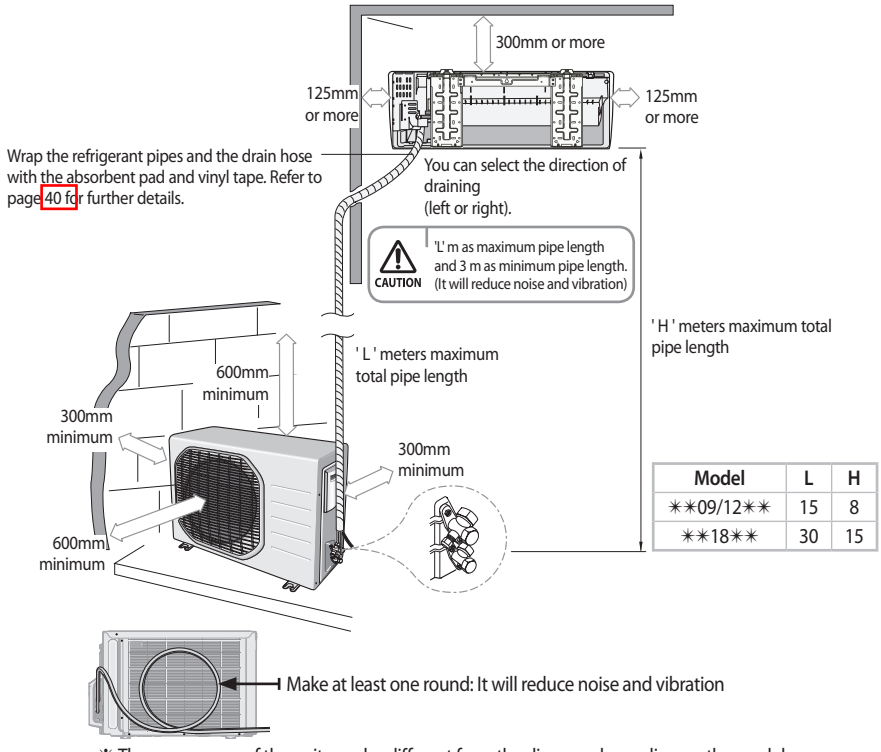
300mm or more
125mm or more
125mm or more
Wrap the refrigerant pipes and the drain hose with the absorbent pad and vinyl tape. Refer to page 40 for further details.
You can select the direction of draining (left or right).
CAUTION
'L' m as maximum pipe length and 3 m as minimum pipe length. (It will reduce noise and vibration)
'H' meters maximum total pipe length
'L' meters maximum total pipe length
600mm minimum
300mm minimum
300mm minimum
600mm minimum
Make at least one round: It will reduce noise and vibration

Model	L	H
✶✶09/12✶✶	15	8
✶✶18✶✶	30	15

❊ The appearance of the unit may be different from the diagram depending on the model.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 26 2011-1-18 16:54:21

Space Requirements for Outdoor Unit

If using a multi system, install as described in the installation manual supplied with the outdoor unit.

When installing 1 outdoor unit

◆Figure Description

Top view	Side view
Air intake Air outlet	Air outlet Air intake

• , Air flow direction.

(Unit : mm)

◆When the air outlet is opposite the wall

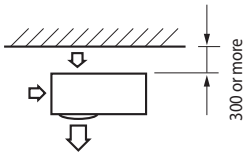

◆When the air outlet is towards the wall

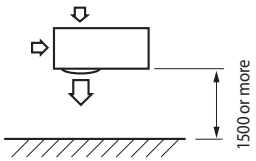

◆When 3 sides of the outdoor unit are blocked by the wall

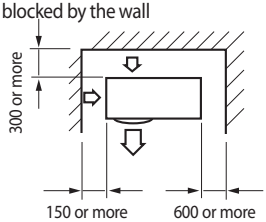

◆The upper part of the outdoor unit and the air outlet is towards the wall

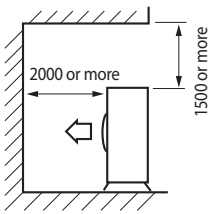

◆The upper part of the outdoor unit and the air outlet is opposite the wall

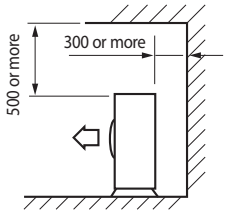

◆When the walls are blocking front and the rear side of the outdoor unit

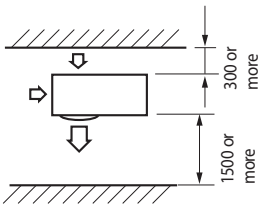

When installing more than 1 outdoor unit

(Unit : mm)

◆When the air outlet is towards the wall

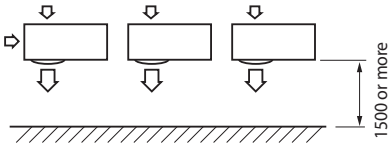

◆When 3 sides of the outdoor unit are blocked by the wall

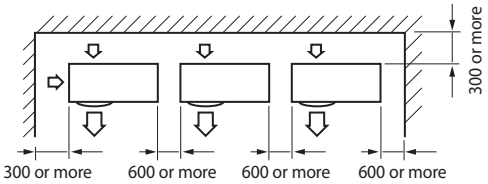

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 27 2011-1-17 17:07:02

Choosing the installation location

(Unit : mm)

◆When the walls are blocking front and the rear side of the outdoor units

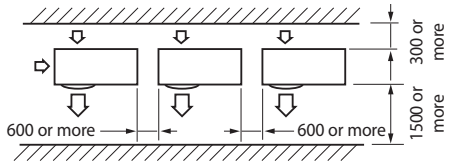

◆When the upper part of the outdoor unit and the air outlet is opposite the wall

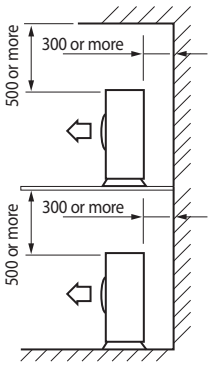

◆When front and rear side of the outdoor unit is towards the wall

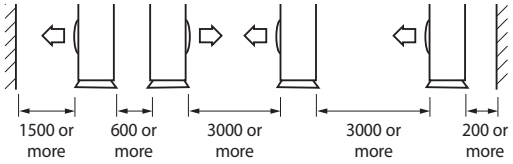

CAUTION
- If installation is done in inappropriate space, unit may generate sound and cause bad effect on the product.
- Installation must be done in level and in a place where vibration will not cause any effect.

Accessories

The following accessories are supplied with the air conditioner:

NOTE
- The number of each accessory is indicated in parentheses.

Accessories in the indoor unit case

If using a multi system, refer to the manual supplied with the outdoor unit.

Installation Plate (1)	Remote controller	Batteries for Remote controller (2)	User's & Installation Manual (1)
			

Accessories in the outdoor unit case

If using a multi system, refer to the manual supplied with the outdoor unit.

4-wire Assembly Cable (1)	Drain Plug (1)	Rubber Leg (4)

NOTE
- The flare nuts are attached to the end of each pipe of an evaporator or a service port. Use the nuts when connecting the pipes.
- The 4-wire assembly cable is optional. If it is not supplied, use the standard cable.
- The drain plug and rubber leg are only included when the air conditioner is supplied without the assembly pipe as seen in the picture.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 28 2011-1-17 17:07:04

Optional accessories

If using a multi system, refer to the manual supplied with the outdoor unit.

The following connection accessories are optional. If they are not supplied, you should obtain them before installing the air conditioner.

Insulated Assembly Pipe, Ø6.35mm (1)	Insulated Assembly Pipe, Ø9.52mm (1) ✳✳09/12✳✳	Insulated Assembly Pipe, Ø12.70mm (1) ✳✳18✳✳	PE T3 Foam Tube Insulation (1)	Vinyl Tapes (2)	Drain Plug (1) 	Rubber Legs (4)
Pipe Clamps A (3)	Pipe Clamps B (3)	Cement Nails (6)	M4 x 25 Tapped Screws (6)	Drain Hose, length 2m (1)	Putty 100g (1)	

NOTE

- If these accessories are supplied, they will be in the accessory box.

Tools required for installation

General Tools

- Vacuum Pump(Backward flowing prevention)
- Manifold Gauge
- Stud Finder
- Torque Wrench
- Pipe Cutter
- Reamer
- Pipe Bender
- Spirit Level
- Screw Driver
- Spanner
- Drill
- L Wrench
- Measuring Tape

Tools for test operations

- Thermometer
- Resistance Meter
- Electroscope

Fixing the installation plate

You can select the direction of the drain hose depending on where you want to install the indoor unit. Therefore before fixing the installation plate to a wall or a window frame, you must determine the position of the 65mm hole through which the cable, pipe and hose pass to connect the indoor unit to the outdoor unit.

When facing the wall, the pipe and cable can be connected from the:

- Right (A)
- Left (B)
- Underside_right (C)
- Rear_right or left (D)

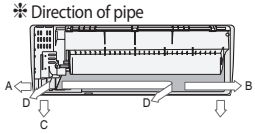

1. **Push the ▼ mark up at the bottom of the indoor unit to detach the plate.**

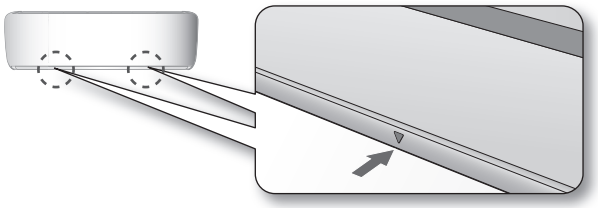

ENGLISH

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 29 2011-1-17 17:07:07

Fixing the installation plate

2. **Determine the position of the pipe and drain hose hole as seen in the picture and drill the hole with an inner diameter of 65mm so that it slants slightly downwards.**

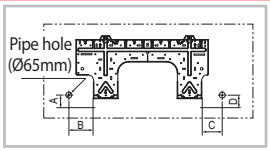

(Unit : mm)

Model	A	B	C	D
AQV✳✳K/Y✳	20	120	95	20

CAUTION
- Make sure to drill only one hole after choosing the direction of the pipe.

3. **Fix the indoor unit.**

If you fix the indoor unit on a wall

(1) Fix the installation plate to the wall giving attention to the weight of the indoor unit.

NOTE
- If you mount the plate to a concrete wall using plastic anchors, make sure that gaps between the wall and the plate, created by projected anchor, is less than 20mm.

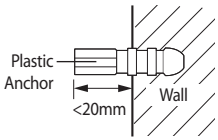

If you fix the indoor unit on a window frame

(1) Determine the positions of the wooden uprights to be attached to the window frame.
(2) Attach the wooden uprights to the window frame giving attention to the weight of the indoor unit.
(3) Attach the installation plate to the wooden upright using tapping screws.

If you fix the indoor unit on a gypsum board

(1) Use stud finder to find out locations of the studs.
(2) Fix the plate hanger on two studs.

CAUTION
- Search for other spots if there are less than two studs, or the distance between the studs are different from the plate hanger.
- Fix the installation plate without inclining to one side.

WARNING
- Make sure that a wall can withstand the weight of the product. If you install the product in a place where it is not strong enough to withstand the product weight, the unit could fall and cause injury.

Connecting the assembly cable

If using a multi system, refer to the manual supplied with the outdoor unit.

Cable specification

Model	Power cable	Interconnection cable	Type GL
✳✳09/12✳✳	3G, 2.5mm² H07RN-F	3G,1.5mm²,H07RN-F	20A
		2G,0.75mm²,H05RN-F	
✳✳18✳✳	3G, 2.5mm² H07RN-F	3G, 1.5mm² H07RN-F	25A
		2G, 0.75mm² H05RN-F	

NOTE
- Connect the power cable to the auxiliary circuit breaker. If every pole fails to connect to the power supply, it must be incorporated in a wire with a contact opening of ≥3mm.

Connecting the cable

❊ When you install the unit, make first refrigerant connections and then electrical connections.
Connect the air conditioner to grounding system before performing the electrical connection.
If unit is uninstalled, first disconnect electrical cables, then refrigerant connections.

If the outdoor unit is more than 5 meters away from the indoor unit, you must extend the cable.
The maximum length of the cable is 15(✳✳09/12✳✳)/20(✳✳18✳✳) meters.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 30 2011-1-18 9:56:11

1. **Extend the assembly cable if necessary.**

> CAUTION
> • Do not connect two or more different cables to extend the length. It may cause fire.

2. **Open the front grille.**

3. **Remove the screw securing the connector cover.**

4. **Pass the assembly cable through the rear of the indoor unit and connect the assembly cable to terminals. (Refer to the picture below)**

> NOTE
> • Each wire is labeled with the corresponding terminal number.

5. **Pass the other end of the cable through the 65mm hole in the wall.**

6. **Close the connector cover by tightening the screw carefully.**

7. **Close the front grille.**

8. **Remove the terminal board cover on the side of the outdoor unit.**

9. **Connect the cables to the terminals as seen in the picture.**

> NOTE
> • Each wire is labeled with the corresponding terminal number.

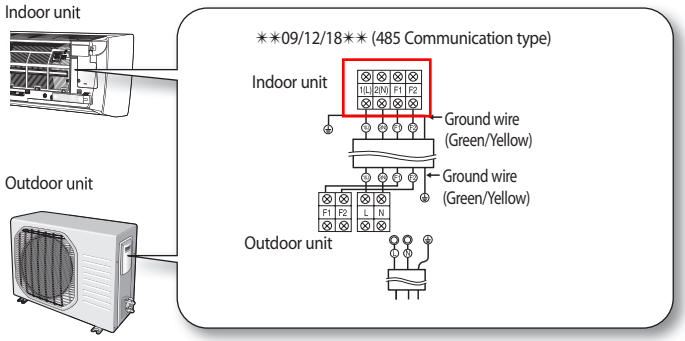

> CAUTION
> • End of the wire must be circular.
> • After connecting the cables, make sure terminal numbers on the indoor/outdoor unit matches.
> • Screws on terminal block must not be unscrewed with the torque less than 12kgf•cm.

10. **Connect the grounding conductor to the grounding terminals.**

11. **Close the terminal board cover by tightening the screw carefully.**

> NOTE
> • In Russia and Europe, consult with the supply authority to determine the supply system impedance before installation.

> WARNING
> • Connect the wires firmly so that wires can not be pulled out easily. (If they are loose, it could cause burn-out of the wires.)
> • Connect the wires according to color codes, referring to the wiring diagram.
> • The power cable and the interconnection cable should be selected according to the specification in page 34.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 31 2011-1-17 17:07:13

Installing and connecting the assembly pipe of the indoor unit

Connect indoor and outdoor units with field-supplied copper pipes by means of flare connections. Use insulated seamless refrigeration grade pipe only, (Cu DHP type according to ISO1337), degreased and deoxidized, suitable for operating pressures of at least 4200 kPa and for burst pressure of at least 20700 kPa. Under no circumstances must sanitary type copper pipe be used.

There are 2 refrigerant pipes of different diameters:

- The smaller one is for the liquid refrigerant
- The larger one is for the gas refrigerant

A short pipe is already fitted to the air conditioner. You may need to extend the pipe using the assembly pipe (optional).

The connection procedure for the refrigerant pipe varies according to the exit position of the pipe when facing the wall:

- Right(A)
- Left(B)
- Underside(C)
- Rear

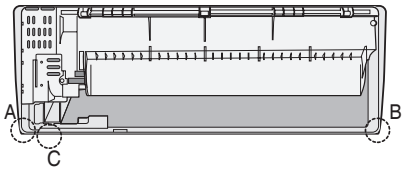

1. **Cut out the appropriate knock-out piece (A, B, C) on the rear of the indoor unit unless you connect the pipe directly from the rear.**
2. **Smooth the cut edges.**
3. **Remove the protection caps of the pipes and connect the assembly pipe to each pipe. Tighten the nuts first with your hands, and then with a torque wrench, applying the following torque.**

Outer Diameter	Torque (kgf•cm)
ø6.35 mm	140~170
ø9.52 mm	250~280
ø12.70 mm	380~420
ø15.88 mm	440~480
ø19.05 mm	990~1210
ø22.23 mm	990~1210

NOTE
- If you want to shorten or extend the pipes, refer to page 33~34.

4. **Cut off the remaining foam insulation.**
5. **If necessary, bend the pipe to fit along the bottom of the indoor unit. Then pull it out through the appropriate hole.**
   - ▶ The pipe should not project from the rear of the indoor unit.
   - ▶ The bending radius should be 100 mm or more.
6. **Pass the pipe through the hole in the wall.**
7. **For further details on how to connect to the outdoor unit and purge the air, refer to page 36~38.**

NOTE
- The pipe will be insulated and fixed permanently into position after finishing the installation and the gas leak test; refer to page 39~40 for further details.

CAUTION
- Tighten the flare nut with torque wrench according to specified method.
  If the flare nut is over-tightened, the flare may break and cause refrigerant gas leakage.
- DO NOT WALL UP THE PIPE CONNECTION !
  All refrigerant pipe connection must be easy accessible and serviceable.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 32 2011-1-17 17:07:13

Purging the indoor unit

The indoor unit is supplied with inert gas (nitrogen).
Before installing the unit, check if nitrogen gas flow out of indoor unit.
If this one isn't true, DO NOT INSTALL THE UNIT since leakage could be inside the indoor unit.

1. **Unscrew the caps at the end of each pipe.**
   ▶ All inert gas exhausts from the indoor unit.

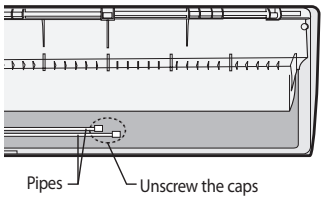

NOTE
- To prevent dirt or foreign substances from getting into the pipes during installation, do NOT remove the caps completely until you are ready to connect the pipes.

CAUTION
- The remaining air in the Refrigeration cycle, which contains moisture, may cause malfunction on the compressor.
- Always contact the service center or a professional installation agency for product installation.

ENGLISH

Cutting or extending the pipe

A 5-meter pipe is supplied with the air conditioner (optional NOT FOR ITALY).
The length of the pipe can be:
- Extended up to : see table page 26
- Shorten up to: see page 26

CAUTION
If you need a pipe longer than 5 meters:
- You must extend the assembly cable.
- You must add refrigerant to the pipes; otherwise, the indoor unit may freeze.

1. **Make sure that you have all the required tools (pipe cutter, reamer, flaring tool and pipe holder).**

2. **If you want to shorten the pipe, cut it using a pipe cutter, ensuring that the cut edge remains at 90° with the side of the pipe (see below examples of correct and incorrect cut edges).**

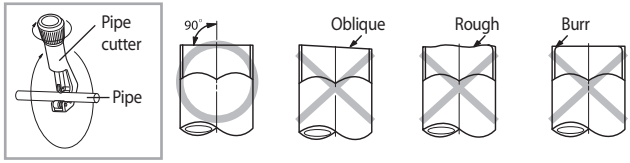

3. **To prevent a gas leak, remove all burrs at the cut edge of the pipe using a reamer.**

CAUTION
- Face the pipe down while removing the burrs to make sure that burrs do not get in to the pipe.

4. **Put a flare nut slightly into the pipe and modify the flare.**

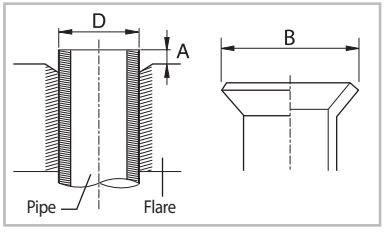

Outer Diameter (D)	Depth (A)	Flaring Size (B)
ø6.35 mm	1.3 mm	9.0 mm
ø9.52 mm	1.8 mm	13.0 mm
ø12.70 mm	2.0 mm	16.2 mm
ø15.88 mm	2.2 mm	19.3 mm
ø19.05 mm	2.2 mm	22.5 mm
ø22.23 mm	2.2 mm	25.7 mm

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 33 2011-1-17 17:07:14

Cutting or extending the pipe

5. **Check if you flared the pipe correctly (see examples of incorrectly flared pipes below).**

6. **Align the pipes to connect them easily. Tighten the flare nuts first with your hands, and then with a torque wrench, applying the following torque.**

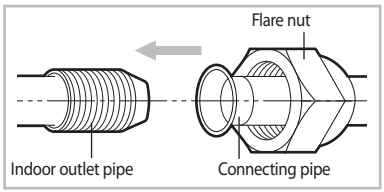

Outer Diameter	Torque (kgf•cm)
ø6.35 mm	140~170
ø9.52 mm	250~280
ø12.70 mm	380~420
ø15.88 mm	440~480
ø19.05 mm	990~1210
ø22.23 mm	990~1210

NOTE

- Excessive torque can be cause of gas leakage. In case brazing the pipe, the nitrogen gas must be blown into the pipe (50 Pa). The joint must be accessible and serviceable.

7. **For further details on how to connect to the outdoor unit and purge the air, refer to page 36~38.**

CAUTION

- Tighten the flare nut with torque wrench according to specified method.
  If the flare nut is over-tightened, the flare may break and cause refrigerant gas leakage.

Installing and connecting the drain hose of the indoor unit

When installing the drain hose for the indoor unit, check if condensation draining is adequate.
When passing the drain hose through the 65-mm hole drilled in the wall, check the followings:

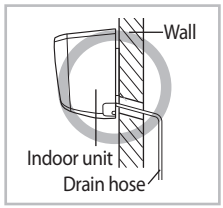

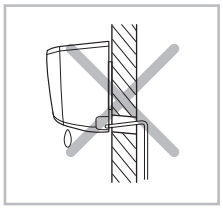

The drain hose must NOT slant upwards.

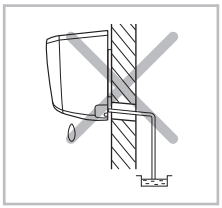

The end of the drain hose must NOT be placed under water.

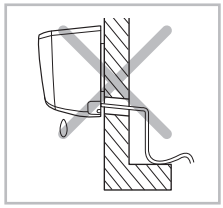

The drain hose must not be bent.

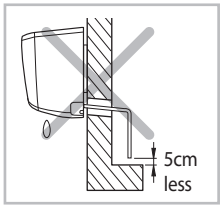

Keep a clearance of at least 5cm between the end of the drain hose and the ground.

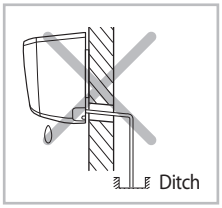

Do not place the end of the drain hose in a hollow.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 34 2011-1-17 17:07:16

Drain hose installation

1. **If necessary, connect the 2-meter extension drain hose to the drain hose.**
2. **If you use the extension drain hose, insulate the inside of the extension drain hose with a shield.**
3. **Fit the drain hose into 1 of 2 drain hose holes, then fix the end of the drain hose tightly with a clamp.**

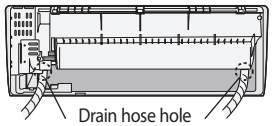

NOTE
- If you do not use the other drain hose hole, block it with a rubber stopper.

4. **Pass the drain hose under the refrigerant pipe, keeping the drain hose tight.**
5. **Pass the drain hose through the hole in the wall. Check if it slants downwards as seen in the picture.**



NOTE
- The hose will be fixed permanently into position after finishing the installation and the gas leak test; refer to page 39~40 for further details.

CAUTION
- Make sure the installed direction of the drain hose is correct.
  Inadequate installation may cause condensate water leakage.
- If the drain hose is routed inside the room, insulate the hose so that dripping condensation does not damage the furniture or floors.
- DO NOT WALL UP THE DRAIN HOSE CONNECTION !
  Drain hose connection must be easy accessible and serviceable.

Changing direction of the drain hose

Change the direction only when it is necessary.

1. **Detach the rubber cap with the plier.**
2. **Detach the drain hose by pulling it and turning to the left.**
3. **Insert the drain hose by fixing it with the screw into the groove of the drain hose and the outlet of the drain pan.**
4. **Attach the rubber cap with a screwdriver by turning it to the right until it fixes to the end of the groove.**
5. **Check for leakage on both side of the drain outlet.**

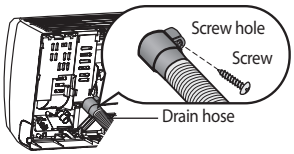

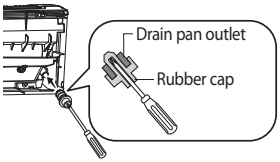

Pour the water in direction of arrow.

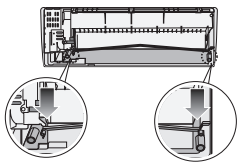

❊ Direction of the drained water

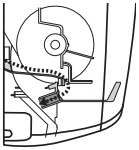

CAUTION
- Make sure the indoor unit is in upright position when you pour water to check for leakage.
  Make sure that the water does not overflow onto the electrical part.

ENGLISH

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 35 2011-1-17 17:07:21

Installing and connecting the drain hose of the outdoor unit

While heating, ice may accumulate. During the process of defrosting, check if condensation draining is adequate. For adequate draining, do the following.

1. **Insert the drain plug into the drain hole on the underside of the outdoor unit.**

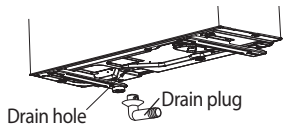

> CAUTION
> • To avoid drain plug from contacting the ground, secure gap between the ground and the bottom surface of the outdoor unit.

2. **Connect a drain hose to the drain plug.**

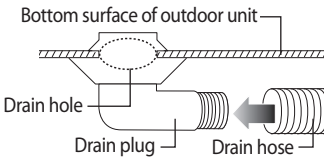

3. **Ensure that condensation draining is adequate.**

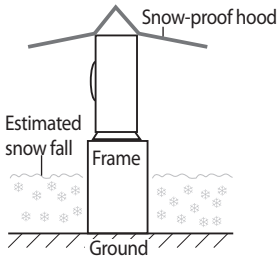

> CAUTION
> • In areas with heavy snow fall, piled snow could block the air intake. To avoid this incident, install a frame that is higher than estimated snow fall. In addition, install a snow-proof hood to avoid snow from piling on the outdoor unit.

Purging the connected pipes

If using a multi system, refer to the manual supplied with the outdoor unit.

The outdoor unit is loaded with sufficient R410A refrigerant. Do not vent R410A into atmosphere: it is a fluorinated greenhouse gas, covered by Kyoto Protocol, with a Global Warming Potential (GWP) = 1975.

You should purge the air in the indoor unit and in the pipe. If air remains in the refrigerant pipes, it affects the compressor. It may cause reduction of cooling capacity and malfunction. Refrigerant for air purging is not charged in the outdoor unit. Use Vacuum Pump as seen in the picture.

> CAUTION
> • When installing, make sure there is no leakage. When recovering the refrigerant, ground the compressor first before removing the connection pipe. If the refrigerant pipe is not properly connected and the compressor works with the service valve open, the pipe inhales the air and it makes the pressure inside of the refrigerant cycle abnormally high. It may cause explosion and injury.

1. **Connect each assembly pipe to the appropriate valve on the outdoor unit and tighten the flare nut.**

2. **Tighten the flare nut first with your hands, and then with a torque wrench, applying the following torque.**

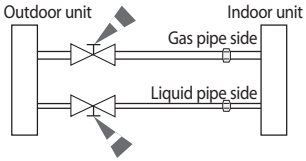

Outer Diameter	Torque (kgf•cm)
ø6.35 mm	140~170
ø9.52 mm	250~280
ø12.70 mm	380~420
ø15.88 mm	440~480
ø19.05 mm	990~1210
ø22.23 mm	990~1210

> NOTE
> • Excessive torque can be cause of gas leakage.

> WARNING
> • Make the electrical connection and leave the system into "stand by mode". Do not turn on the system!
> This is necessary for better vacuum operation (full OPEN position of Electronic Expansion Valve - EEV -).

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 36 2011-1-17 17:07:22

3. **Connect the charging hose of the low-pressure side of manifold gauge to a gas service port as seen in the picture.**

4. **Open the valve of the low pressure side of manifold gauge counterclockwise.**

5. **Purge the air in the connected pipes using the vacuum pump for about 15 minutes.**
   - ▶ Make sure that pressure gauge shows -0.1MPa(-76cmHg) after about 10 minutes.
     This procedure is very important to avoid a gas leak.
   - ▶ Close the valve of the low pressure side of manifold gauge clockwise.
   - ▶ Turn off the vacuum pump.
   - ▶ Check for 2 minutes if there is any pressure change.
   - ▶ Remove the hose of the low pressure side of manifold gauge.

6. **Set a valve cork of liquid and gas service port to the open position.**

7. **Mount the valve stem nuts and the service port cap to the valve, and tighten them at the torque of 183kgf•cm with a torque wrench.**

8. **Check for a gas leak paying particular attention to the 3-way valve's stem nuts and to the service port cap (Refer to page 39).**

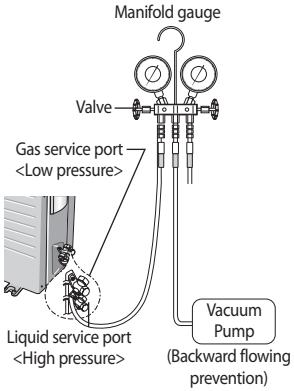

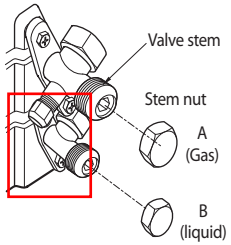

Adding Refrigerant

Add refrigerant charge according to table below:

If you use a pipe longer than 5m,

'A'g of refrigerant R410A must be added for each extra meter.

If you use a pipe shorter than 5m,

The purge time is normal.

Refer to the Service Manual for further details.

Model	A
✳✳09/12✳✳	15
✳✳18✳✳	20

CAUTION
- The remaining air in the Refrigeration cycle, which contains moisture, may cause malfunction on the compressor.
- Always contact the service center or a professional installation agency for product installation.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 37 2011-1-17 17:07:23

Purging the connected pipes

Important information regulation regarding the refrigerant used

This product contains fluorinated greenhouse gases covered by the Kyoto Protocol.
Do not vent gases into the atmosphere.

Refrigerant type	GWP value
R410A	1975

❊ GWP=Global Warming Potential

1. **Please fill in with indelible ink,**
   - ▶ ① the factory refrigerant charge of the product,
   - ▶ ② the additional refrigerant amount charged in the field and
   - ▶ ①+② the total refrigerant charge. on the refrigerant charge label supplied with the product.

NOTE

a. Factory refrigerant charge of the product: see unit name plate
b. Additional refrigerant amount charged in the field (Refer to the above information for the quantity of refrigerant replenishment.)
c. Total refrigerant charge
d. Refrigerant cylinder and manifold for charging

Contains fluorinated greenhouse gases covered by the Kyoto Protocol.

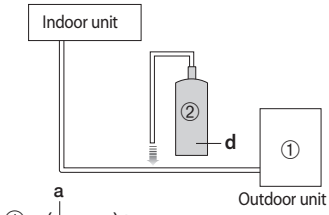

①=(a) kg
②=(b) kg
①+②=(c) kg

CAUTION

- The filled-out label must be adhered in the proximity of the product charging port (e.g. onto the inside of the stop valve cover).

Charging the refrigerant under conditions of liquid by using a liquid pipe

R410A is a mixed type of refrigerant. It is necessary for recharging under conditions of liquid. When recharging refrigerant from the refrigerant cylinder to the equipment, follow the instructions below.

1. **Before recharging, check whether the cylinder has a siphon or not. There are two ways to recharge the refrigerant.**

Cylinder with siphon

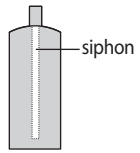

▶ Charge the refrigerant standing the cylinder upright.

Cylinder without siphon

▶ Charge the refrigerant turning the cylinder upside down.

NOTE

- If R410A refrigerant is charged with gas, the composition of the charged refrigerant changes and the characteristics of the equipment vary.
- During the measuring operation of refrigerant quantity added use an electronic balance. If cylinder doesn't have syphon, upset it.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 38 2011-1-17 17:07:24

Performing the gas leak tests

If using a multi system, refer to the manual supplied with the outdoor unit.

Make sure to check for gas leaks before completing the installation process (connecting the assembly pipe and hose between indoor unit and outdoor unit, insulating the cables, hose and pipe, and fixing the indoor unit to the installation plate).

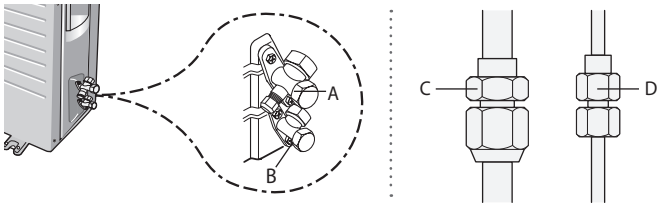

To check for gas leaks on the outdoor unit,

Check the valve A and B using a leak detector.

To check for gas leaks on the indoor unit,

Check the flare nut C and D using a leak detector.

Leak test with nitrogen (before opening valves)

In order to detect basic refrigerant leaks, before recreating the vacuum and recirculating the R410A, it's responsible of installer to pressurize the whole system with nitrogen (using a cylinder with pressure reducer) at a pressure above 40 bar (gauge).

Leak test with R410A (after opening valves)

Before opening valves, discharge all the nitrogen from the system and create vacuum according to page 36~38.
After opening valves, check leaks using a leak detector for refrigerant.

Pump down (before disconnecting the refrigerant connections for unit repair, removal or disposal)

Pump-down is an operation intended to collect all the system refrigerant in the outdoor unit.

This operation must be carried out before disconnecting the refrigerant tubing in order to avoid refrigerant loss to the atmosphere.

- ▶ Shut off the liquid valve with the Allen wrench.
- ▶ Turn the system on in cooling with fan operating at high velocity.
  (Compressor will immediately start, provided 3 minutes have elapsed since the last stop).
- ▶ After 2 minutes of operation, shut the suction valve with the same wrench.
- ▶ Turn the system off and switch mains supply off.
- ▶ Disconnect tubing. After disconnection, protect valves and tubing ends from dust.
- ▶ Compressor damage may occur if run at a negative suction pressure.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 39 2011-1-17 17:07:24

Fixing the indoor unit in place

Perform the following work on the area where gas leak test was done priorly.

After checking for gas leaks in the system, insulate the pipe, hose and cables.
Then place the indoor unit on the installation plate.

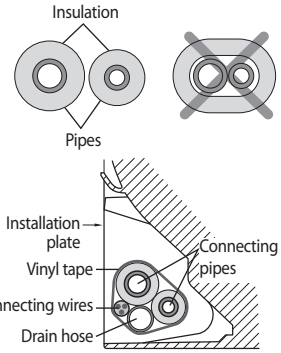

1. **To avoid condensation problems, wrap foam insulation (as shown in the figure) on a part without insulation on the end of the pipes.**
2. **Wind the pipe, assembly cable and drain hose with vinyl tape.**
3. **Place the bundle (the pipe, assembly cable and drain hose) in the lower part of the indoor unit carefully so it does not project from the rear of the indoor unit.**
4. **Hook the indoor unit to the installation plate and move the unit to the right and left until it is securely in place.**

CAUTION
- Make sure pipe does not move when you install the indoor unit on an installation plate.

5. **Wrap the rest of the pipe with vinyl tape.**
6. **Attach the pipe to the wall using clamps (optional).**

Fixing the outdoor unit in place

Install the outdoor unit in level on a stable base to avoid the generation of noise and vibration, especially when installing the unit close to a neighbor.
If you install the outdoor unit in a place exposed to strong winds or at a height, fix it to an appropriate support (wall or ground).

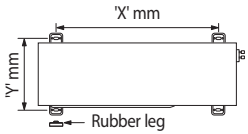

1. **Place the outdoor unit as indicated on the top of the unit to let the discharged air out properly.**
2. **Fix the outdoor unit in level to an appropriate support using anchor bolts.**
3. **If the outdoor unit is exposed to strong winds, install shield plates around the outdoor unit so that the fan can operate correctly.**

Model	X	Y
AQV✳✳K✳✳	612	317
AQV✳✳Y✳✳	612	317
RJ040/050✳✳	612	317
RJ060/070/080✳✳	660	350

NOTE
- Secure the rubber leg to prevent the generation of noise and vibration.

Outdoor unit installed on the wall by rack

- Ensure the wall will be able to suspend the weight of rack and outdoor unit;
- Install the rack close to the column as much as possible;
- Install proper grommet in order to reduce noise and residual vibration transferred by outdoor unit towards wall.

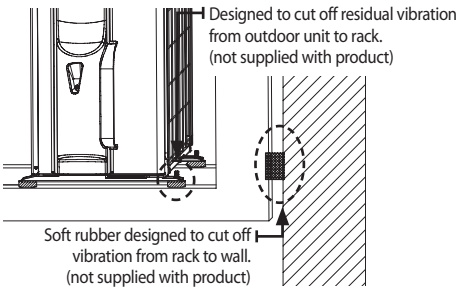
Designed to cut off residual vibration from outdoor unit to rack. (not supplied with product)
Soft rubber designed to cut off vibration from rack to wall. (not supplied with product)

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 40 2011-1-17 17:07:25

Final Check and Trial Operation

To complete the installation, perform the following checks and tests to ensure that the air conditioner operates correctly.

Check the followings:

- Strength of the installation site
- Tightness of pipe connection to detect gas leak
- Electric wiring connection
- Heat-resistant insulation of the pipe
- Drainage
- Grounding conductor connection
- Correct operation (follow the steps below)

1. **Press the Power ⏻ button and check the following:**
   - ▶ The indicator on the indoor unit lights up.
   - ▶ The airflow blade opens and the fan gears up for operation.

2. **Press the Mode button to select Cool or Heat mode.**
   - ▶ In Cool mode, use **Temp hr. +** or **–** button and set the temperature at 16°C.
   - ▶ In Heat mode, use **Temp hr. +** or **–** button and set the temperature at 30°C.

NOTE
- Approximately 3~5 minutes later, outdoor unit will start to operate and the Cool or Warm air will blow out.
- After 12 minutes of stationary condition check the indoor unit air treatment.

Cooling mode (indoor unit check) → Inlet air temp. - Outlet air temp:
From 10°K to 12°K (indicative delta T)

Heating mode (indoor unit check) → Outlet air temp. - Inlet air temp:
From 11°K to 14°K (indicative delta T)

In heating mode, the indoor fan motor can remain off to avoid cold air blown into conditioned space.

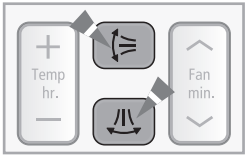

3. **Press the Air swing button and check the following:**
   - ▶ The airflow blades work properly.

4. **Press the Power ⏻ button to stop the operation.**

NOTE
- When you complete the installation successfully, hand over this manual to the user for storage in a handy and safe place.

Pump down procedure (when removing the product)

1. **Turn on the air conditioner and select Cool mode to run the compressor for 3 minutes.**
2. **Release the valve caps on High and Low pressure side.**
3. **Use L wrench to close the valve on the high pressure side.**
4. **Approximately 2 minutes after, close the valve on the low pressure side.**
5. **Stop operation of the air conditioner.**
6. **Disconnect the pipes.**

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 41 2011-1-17 17:07:27

How to connect your extended power cables

Items to prepare
(compressor and insulation tape should be prepared by an installation technician.)

Tools	Crimping plier	Connection sleeve (mm)	Insulation tape	Contraction tube (mm)
Spec	MH-14	20xØ7.0(HxOD)	Width 18mm	50xØ8.0(LxOD)
Shape				

1. **As shown in the figure, peel off the shields from the rubber/wire of the power cable.**
   - Peel off 20 mm of the wire shields of the tube installed already.

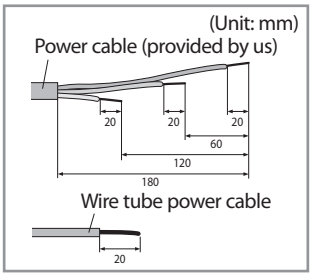

CAUTION
- After peeling off the tube wire, you must insert a contraction tube.

2. **Insert both sides of core wire of the power cable into the connection sleeve.**



3. **Using a compressor, compress the two points and flip it over and compress another two points in the same location.**
   - The compression dimension should be 8.0.
   - After compressing it, pull both sides of the wire to make sure it is firmly pressed.

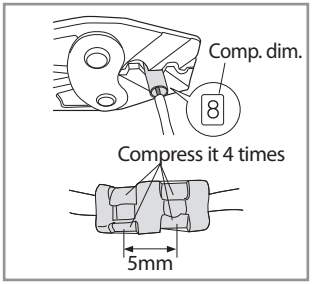

4. **Wrap it with the insulation tape twice and position your contraction tube in the middle of the insulation tape.**
5. **Apply heat to the contraction tube to contract it.**

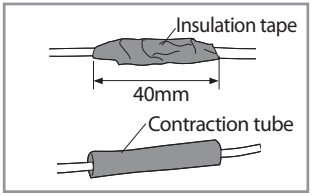

6. **After tube contraction work is completed, wrap it with the insulation tape to finish.**



WARNING
- In case of extending the electric wire, please DO NOT use a round-shaped pressing socket.
  - Incomplete wire connections can cause electric shock or a fire.



AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 42 2011-1-17 17:07:29

Sub PCB installation(optional)

Only for multi system

(Wried remote controller, central remote controller etc.)

1. **Turn the power off and take off the front panel of the indoor unit.**

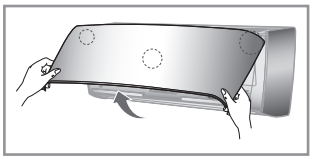

2. **Take off the Cover PCB.**

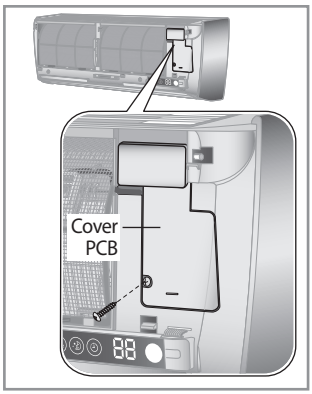

3. **Attach the Sub PCB to the right side of the Panel frame.**

4. **Find the PCB wire, and connect the wire to the Sub PCB as seen in the picture.**

5. **Connect the wire(remote controller, central remote controller etc) to the Sub PCB.**

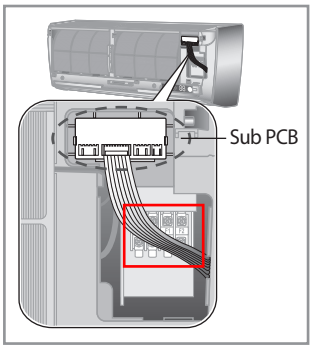

6. **Reassemble the Cover PCB and the front panel.**

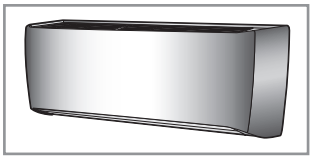

NOTE

- The Sub PCB is attached to be controlled by the wired remote controller and central controller.

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 43 2011-1-17 17:07:33

SAMSUNG

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
ALBANIA	42 27 5755	
AUSTRIA	0810 - SAMSUNG (7267864, € 0.07/min)	www.samsung.com
BELGIUM	02-201-24-18	www.samsung.com/be (Dutch) www.samsung.com/be_fr (French)
BOSNIA	05 133 1999	
BULGARIA	07001 33 11	www.samsung.com
CROATIA	062 SAMSUNG (062 726 7864)	www.samsung.com
CZECH	800 - SAMSUNG (800-726786)	www.samsung.com
DENMARK	70 70 19 70	www.samsung.com
FINLAND	030 - 6227 515	www.samsung.com
FRANCE	01 48 63 00 00	www.samsung.com
GERMANY	01805 - SAMSUNG(726-7864 € 0,14/Min)	www.samsung.com
GREECE	80111-SAMSUNG (80111 7267864) from land line, local charge/ 210 6897691 from mobile	www.samsung.com
HUNGARY	06-80-SAMSUNG(726-7864)	www.samsung.com
ITALIA	800-SAMSUNG(726-7864)	www.samsung.com
KOSOVO	+381 0113216899	
LUXEMBURG	261 03 710	www.samsung.com
MACEDONIA	023 207 777	
MONTENEGRO	020 405 888	
NETHERLANDS	0900-SAMSUNG (0900-7267864) (€ 0,10/Min)	www.samsung.com
NORWAY	815-56 480	www.samsung.com
POLAND	0 801 1SAMSUNG(172678) 022-607-93-33	www.samsung.com
PORTUGAL	80820-SAMSUNG(726-7864)	www.samsung.com
RUMANIA	08010 SAMSUNG (08010 726 7864) only from landline, local network Romtelecom - local tariff /021 206 01 10 for landline and mobile, normal tariff	www.samsung.com
SERBIA	0700 Samsung (0700 726 7864)	www.samsung.com
SLOVAKIA	0800-SAMSUNG(726-7864)	www.samsung.com
SPAIN	902 - 1 - SAMSUNG (902 172 678)	www.samsung.com
SWEDEN	0771 726 7864 (SAMSUNG)	www.samsung.com
Switzerland	0848 - SAMSUNG(7267864, CHF 0.08/min)	www.samsung.com/ch www.samsung.com/ch_fr/(French)
U.K	0330 SAMSUNG (7267864)	www.samsung.com
EIRE	0818 717100	www.samsung.com
LITHUANIA	8-800-77777	www.samsung.com
LATVIA	8000-7267	www.samsung.com
ESTONIA	800-7267	www.samsung.com

AQV09K✳ Series
AQV12K✳ Series
AQV18K✳ Series
AQV09Y✳ Series
AQV12Y✳ Series
AQV18Y✳ Series

Air Conditioner
user & installation manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register your product at

www.samsung.com/register

SAMSUNG

Ⓔ Ⓢ Ⓕ Ⓘ Ⓟ Ⓓ Ⓖ Ⓑu Ⓡo Ⓒr DB98-32437A-1

AQV09K&Y@@_Jungfrau_IBIM_E_32437A.indd 45 2011-1-20 9:56:24